

Raised Platform

SKU: NW-STARTSTOP

Recommended Tools:

- Compact Drill/Driver
- Hammer
- 3/4" Wrench



Part Number	Part Description	Quantity
NW-STARTSTOP-FRAME	Steel Frame	1
NW-STARTSTOP-LEG	Wooden Bottom & Side	2
NW-STARTSTOP-PAD	Vinyl Pad	2
267845	1/2" Carriage Bolt	4
425022	1/2" Flat Washer	4
288987	1/2" Lock Washer	4
201825	1/2" Hex Nut	4
1133006	5/16" Flat Washer	6
91478A595	5/16" Hex Head Screw	6

Need help?
Call 1-800-932-3339 or
Email info@gymsupply.com



Step 1:

Assemble the base of the Raised Platform by inserting the **Wooden Bottom** into the slot on the **Wooden Sides** (velcro side face-down). Position the two bases with an 8ft distance between them, orienting the sides that are flush towards each other.

Step 2:

Insert the **Steel Frame** into the slot on **Wooden Sides** (velcro side face-up). Secure with **Carriage Bolts**.



Step 3:

Place the **Vinyl Pads** on top of the **Steel Frame** and secure to the velcro. Secure the feet to carpet bonded foam.